


**AMERICAN
PRO** Products

<http://www.americanpro-audio.com>

User Manual

275 NEO Led Spot

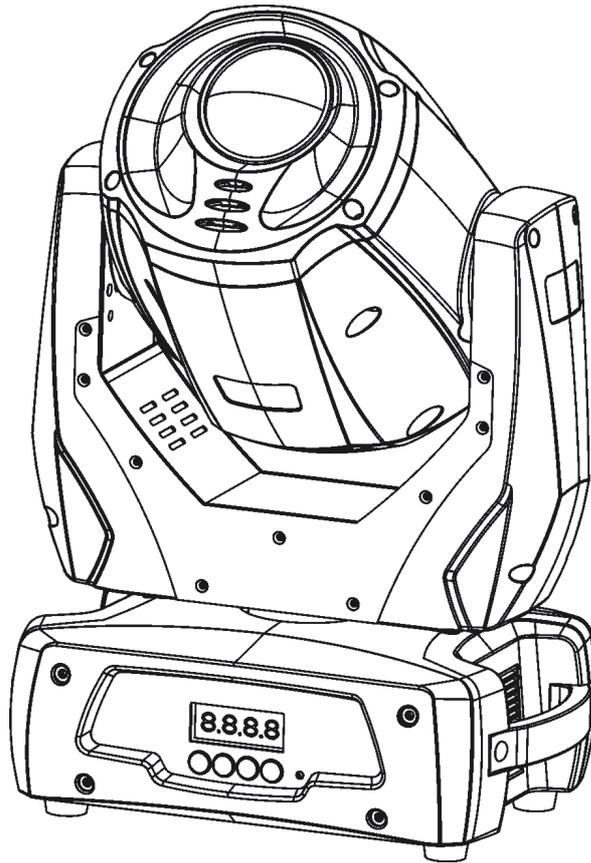

KEEP THIS MANUAL

FOR FUTURE

NEEDS **CE**

Contents

1. Features	2
2. Overview	3
3. SAFETY INSTRUCTIONS	3
3.1) Important safety warns	3
3.2) GENERAL GUIDELINES	4
4. INSTALLATION INSTRUCTIONS	5
4.1) Mounting the device	5
5. DMX-512 control connection	8
6. DMX-512 connection with DMX terminator	9
7. Projector DMX start address selection	9
8. Control Board	1 0
<i>Main Menu Functions</i>	1 1
9. INSTRUCTIONS ON USE:	1 8
10. ERROR MESSAGE	1 8
11. CLEANING AND MAINTENANCE	2 1
12. TECHNICAL SPECIFICATIONS	2 2

Thank you for your patronage. We are confident that our excellent products and service can satisfy you. For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safely and correctly. We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.



Every person involved with the installation, operation and maintenance of this device has to:
-be qualified
-follow carefully the instructions of this manual

INTRODUCTION:

Thank you for having chosen this professional LED moving head. You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the box you should find:


1. One XLR connection cable
2. One omega clamps
3. One safety rope
4. Manual

Please check carefully that there is no damage caused by transportation. Should there be any, consult your dealer and don't install this device.

1. Features

- Extremely Long Life: 100,000 hr and lower power consumption
- 2 DMX channel mode: 12/14 channels
- 3 operational modes: DMX-512, Master/Slave & Sound Active
- 630° or 540° pan / 270° tilt (8-bit)
- Strobe effect with 1-13 flashes per second and pulse effect
- Color wheels: 8 dichroic filters plus open, rainbow-effect with adjustable speed in both directions
- Rotation gobo: 7 interchangeable, rotating gobos plus open
- Prism and prism rotating, with 16 prism macros
- Linear dimmer in precise speed from 0% ~ 100%
- 4 digit LED display
- Preset program: 7 built in programs can be called up via DMX controller
- Fan automatically adjust speed according to the LED temperature
- Software-upload by optional accessory via DMX line

2. Overview

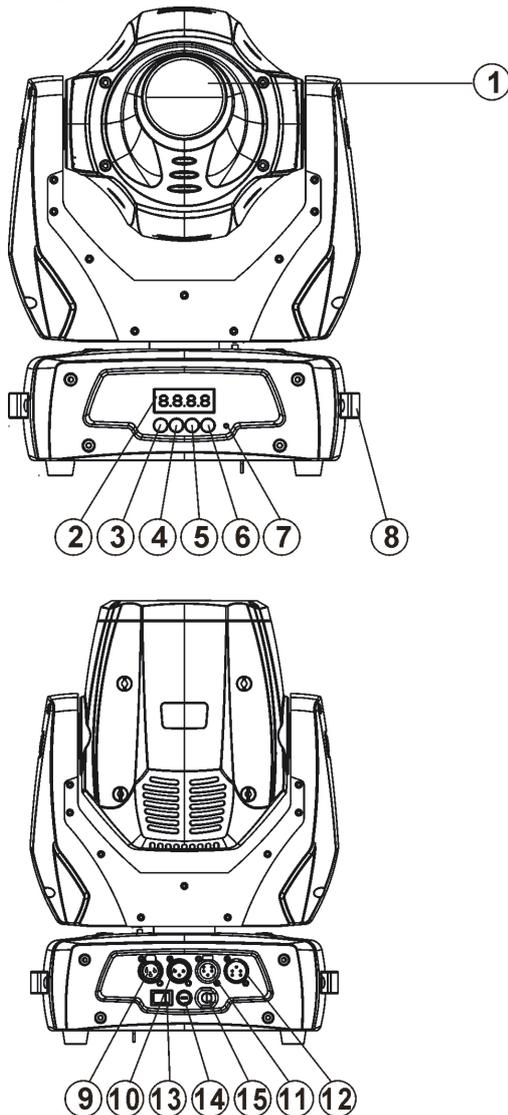

- 1) Lens
- 2) Display
- 3) Mode/Esc-button
- 4) Up-button
- 5) Down-button
- 6) Enter-button
- 7) Microphone
- 8) Handle
- 9) 3 pin-DMX out
- 10) 3 pin-DMX in
- 11) 5 pin-DMX out
- 12) 5 pin-DMX in
- 13) Power switch
- 14) Fuse
- 15) Power supply

3. SAFETY INSTRUCTIONS

3.1) Important safety warns

	<p>CAUTION! Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!</p>
---	---

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Important:



Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

	CAUTION! Never touch the device during operation! The housing may heat up
	CAUTION! Never look directly into the light source, as sensitive persons may suffer an epileptic shock.

Please be aware that damages caused by manual modifications to the device are not subject to warranty. Keep away from children and non-professionals.

3.2) GENERAL GUIDELINES

This device is a lighting effect for professional use on stages, in discotheques, theatres, etc., the device was designed for indoor use only.

This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in the last page of this manual.

Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. Please don't project the beam onto combustible substances. The minimum distance between light-output from the projector and the illuminated surface must be more than 0,5 meter.

If you use the quick lock cam in hanging up the fixture, please make sure the quick lock fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported.

For safety reasons, please be aware that all modifications on the device are forbidden.

If this device will be operated in any way different to the one described in this manual, the

product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, lamp explosion, crash, etc.

4. INSTALLATION INSTRUCTIONS

4.1) Mounting the device

	CAUTION! Please consider the GB7000.1-2007,GB7000.217-2008 and the other respective national norms during the installation. The installation must only be carried out by a qualified person.
---	--

The applicable temperature for the lighting is between -10°C to 45°C. Do not use the lighting under or above the temperature.

The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope.

Never stand directly below the device when mounting, removing or servicing the fixture.

The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.

These installations have to be approved by a skilled person once a year.


Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

	CAUTION! The electric connection must only be carried out by a qualified electrician.
---	---

Before mounting make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Connect the fixture to the mains with the power plug.





Installation via the Omega holders

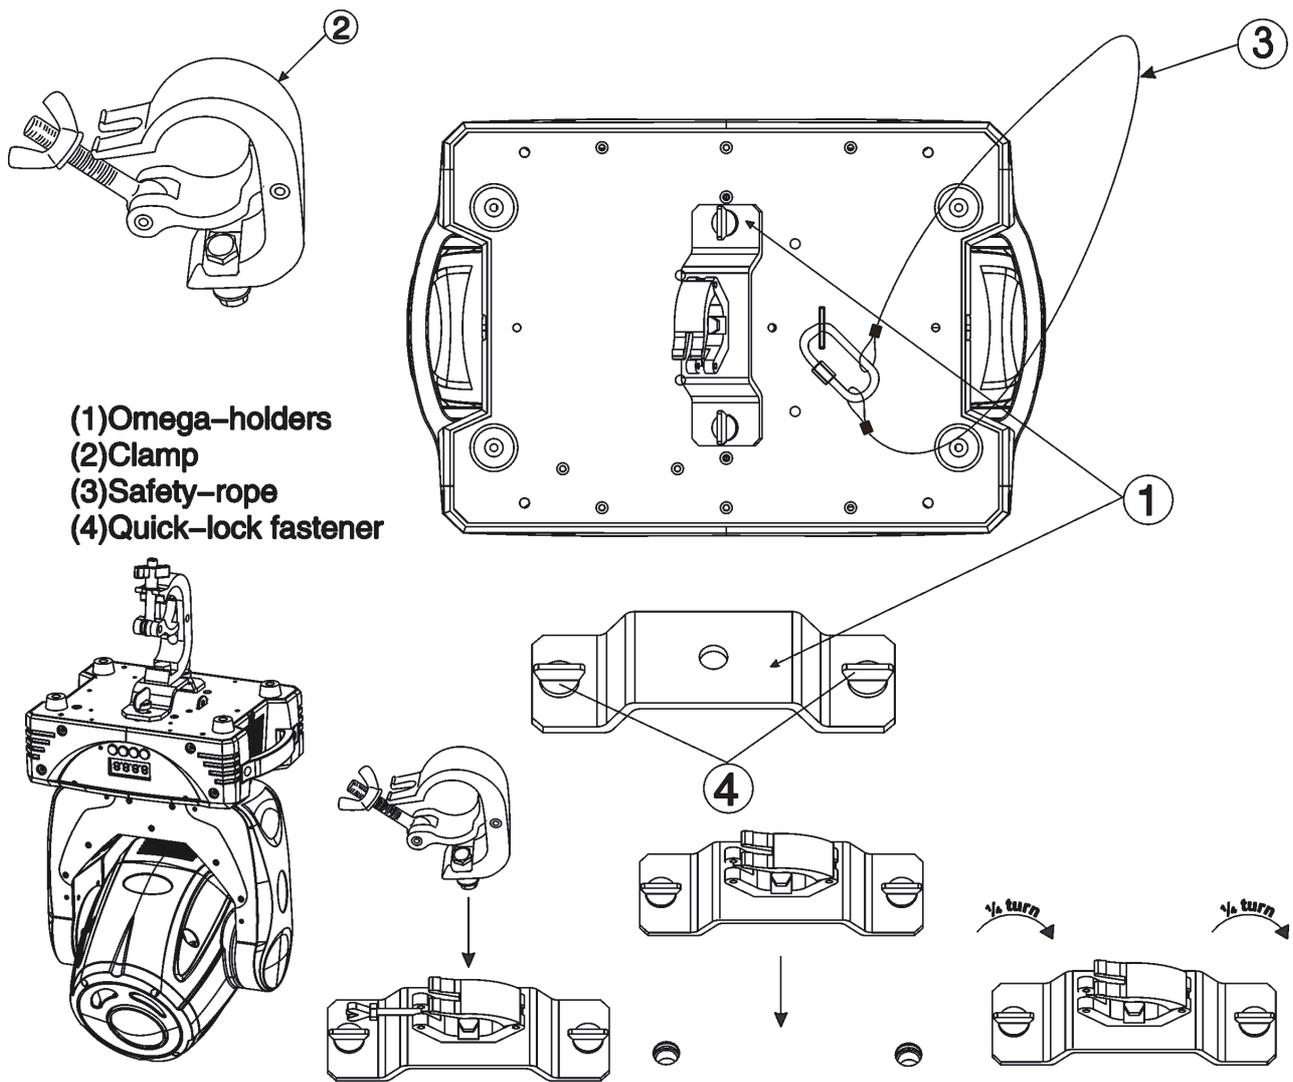


- a) Fixed the clamp on the bracket by tighten up the M12 screw on the bracket to the $\Phi 13$ hole in the middle of the bracket.
- b) Insert the quick-lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise.
- c) Install the second Omega holder.
- d) Pull the safety-rope through the holes on the bottom of the base and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw.

Notice: this step is quite important to ensure that the fixture will not drop out by the damage of the clamp.

Dimensional Drawings:

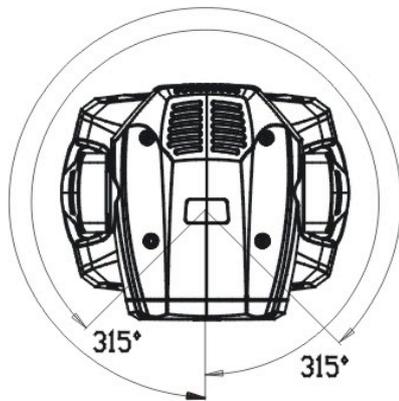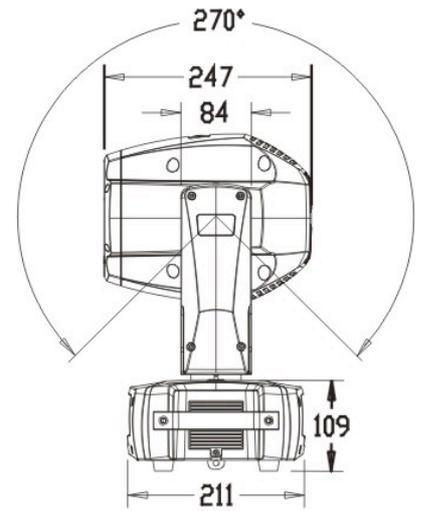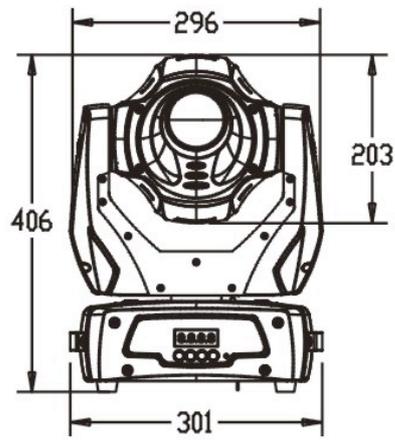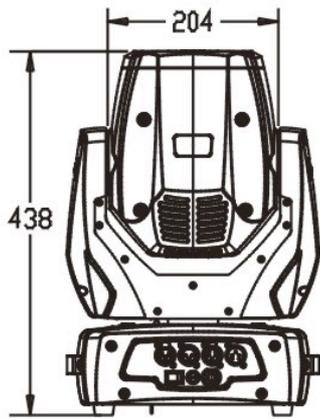

Layout Drawings:

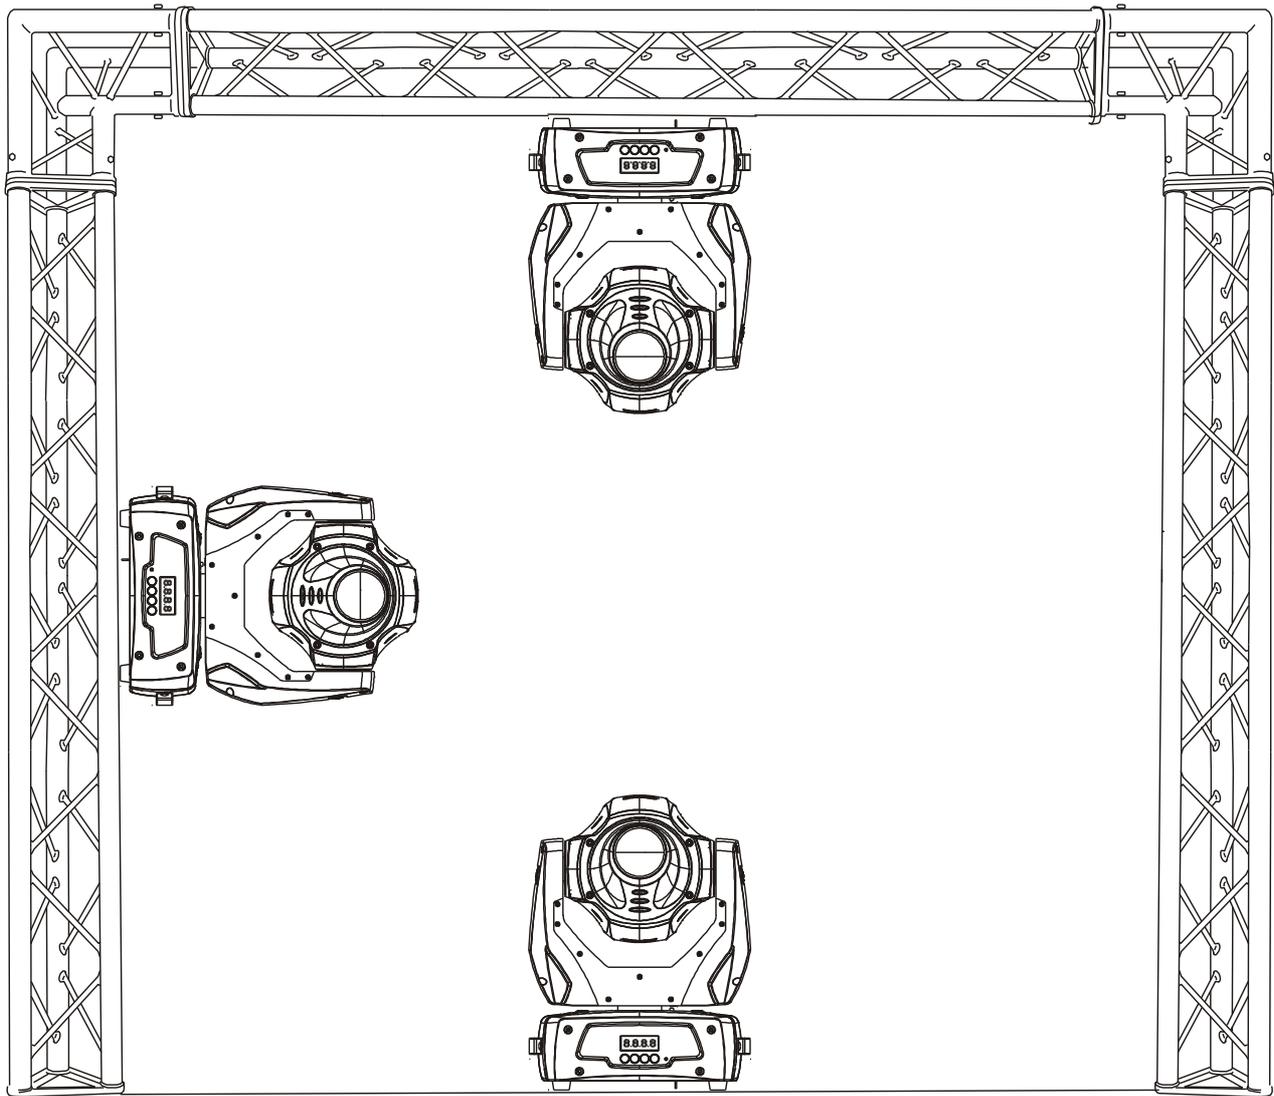

Mounting points


Be sure this fixture is kept at least 0.5m away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

5. DMX-512 control connection


Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple

Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

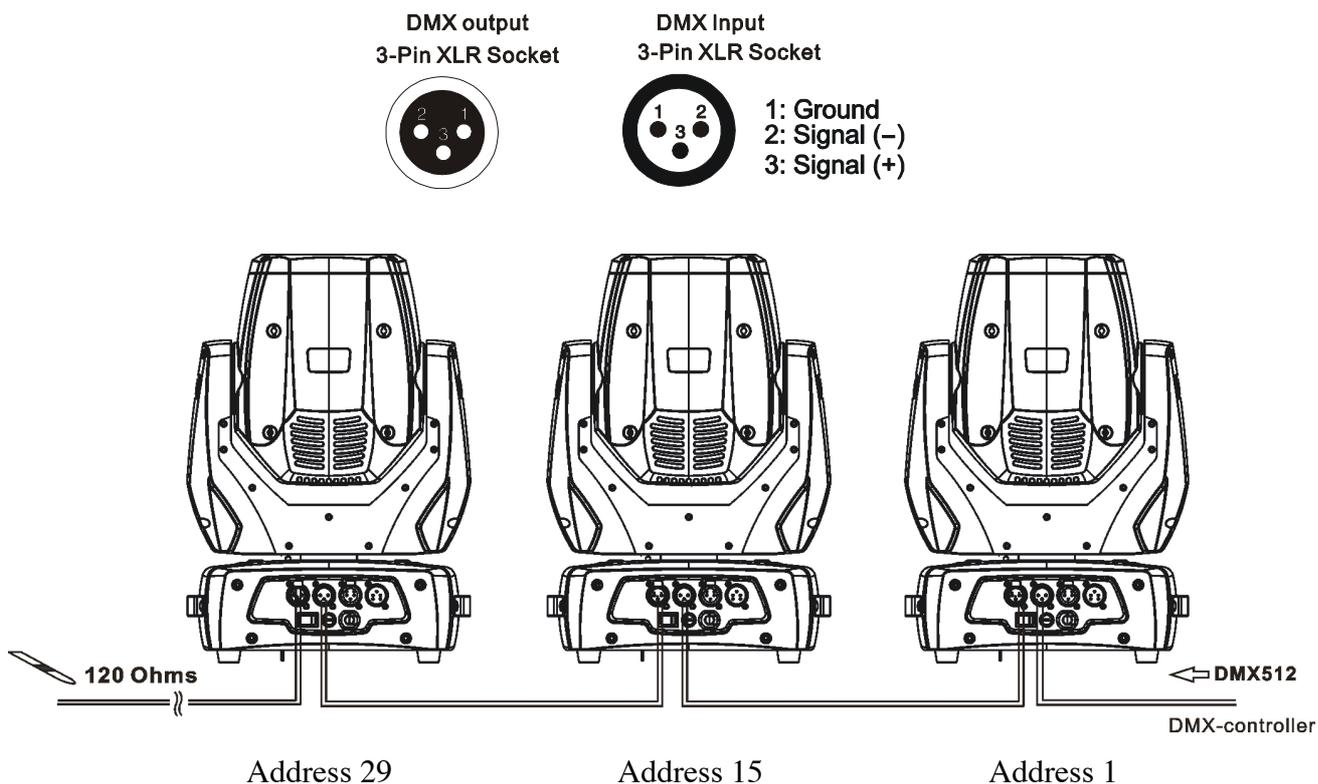

6. DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

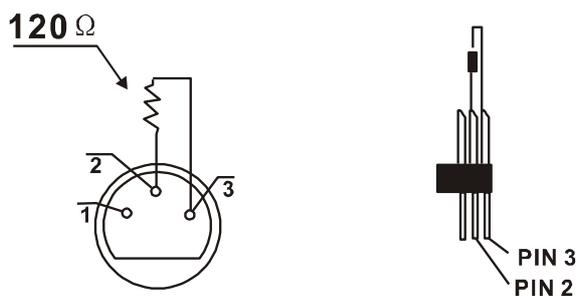

7. Projector DMX start address selection

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or make different address for each fixture individually.

If you set the same address, all the units will start to “listen” to the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to “listen” to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one


channel will affect only the selected fixture.

0	MODE	ADDR	VALU	A001~AXXX (AXXX)	DMX address setting
			SLAV	ON/OFF (SLAV)	Slave setting

In the case of the move head, which is a 14 channel fixture, you should set the starting address of the first unit to 1, the second unit to 15 (14 + 1), the third to 29 (14 + 15), and so on.

Note:

The modes of DMX 512 data are shown via the display:

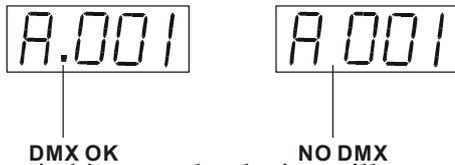

1. After switching on, the device will automatically detect whether DMX 512 data is received or not. If the data is received, the display will show "A.001" with the actually set address. If there is no data received at the DMX-input, the display will flash "A001" with the actually set address.

This situation can occur if:

- the 3 PIN XLR plug (cable with DMX signal from controller) is not connected with the input of the device.
- the controller is switched off or defective, if the cable or connector is defective or the signal wires are swap in the input connector.

It's necessary to insert the XLR termination plug (with 120 Ohm) in the last lighting in the link in order to ensure proper transmission on the DMX data link.

8. Control Board

There are four keys on the control panel , which could be used to set the address, turn ON/OFF, operating the program and reset.

[Mode/Esc] press this key to enter into edit mode. Press this key under the edit mode if you want to return to previous menu. it will exit from edit mode 60 seconds after the last keypress

[UP] screen will flash when pressing this key in normal mode, the adress value will increasing. Keep pressing this key, the address value will increase rapidly. it will exit from flash 60 seconds after the last keypress. Press this key under edit mode, you can choose the function you want from the buttom up in the menu.

[DOWN] screen will flash when pressing this key in normal mode, the adress value will idecreasing. Keep pressing this key, the address value will decrease rapidly. it will exit from flash 60 seconds after the last keypress. Press this key under edit mode, you can choose the function you want from the top down in the menu.

[ENTER] this key is functionless when in normal mode. Press this key under the edit mode, it will enter into next menu.

1	SET	EBOC	ON/OFF	Change DMX address via external controller		
		RUN	AUTO	ALON (AU-A)	Automatic Run in Stand Alone	
				MAST (AU-M)	Automatic Run as Master	
			SOUN	ALON (SO-A)	Sound-controlled Run in Stand Alone	
				MAST (SO-M)	Sound-controlled Run as Master	
		DISP	VALU	D-XX D-00 (DXXX)	Display the DMX 512 value of each channel	
			RDIS	ON/OFF	Reverse display	
			CLDI	ON/OFF	Shut off LED display	
			LOCK	ON/OFF	Key lock	
		1	SET	RPAN	ON/OFF	Pan Reverse
				RTIL	ON/OFF	Tilt Reverse
				16BI	ON/OFF	Switch 16 bit/8 bit
DEGR	630/540			Pan degree select		
MIC	M-XX M-70			Mic sensitivity		
AUTO	Clos/Hold/Auto/Audi			No DMX Status		
FANS	AUTO/HIGH/LOW			Fan's mode select		
REST				Reset		
LODA	ON/OFF			Restore factory settings		
HIbE	OFF/1-99M 15M			Stand by mode		
VER	V-1.0~V-9.9			Software version		
2	ADJU	LADJ	ON/OFF	Lamp adjustment		
		TEST	T-01~T-XX	Test function of each channel		
		WHEL	CODE	CXXX (密码 050)	Fixture code *code is "C050"	
CH01~CHXX	XXXX(-128~127)		Motor Calibration			
3	TIME	MATI	0000~9999(hours)	Fixture running time		
		CLMT	ON/OFF	(密码 838)	Clear fixture time	
4	EDIT	STEP	S-01 ~S-48	Steps of Program Run		
		REC.	RE.XX	Auto Save Scene		
		SC01 ~ SC48	C-01~C-XX	XXX(0~255)	Edit the channels of each scene	
			TIME	T XXX(001~999)	Time for each scene	
			CNIN	ON/OFF	Edit program via controller	

Default settings shaded

Main Menu Functions

Main functions:

MODE - SET - ADJU - TIME - EDIT

MODE - Main menu 0

1. Press **[MODE/ESC]** to enter the main menu "MODE" (display flashing)
2. Press **[ENTER]** and select "ADDR", "RUN" or "DISP" by pressing **[UP]** or **[DOWN]** button.
3. Press **[ENTER]** for selecting the desired sub menu.

MODE - ADDR
RUN
DISP

Addr - DMX address setting, Slave setting

MODE - **Addr** - **VALU** - ADDR 1-811111
SLAV - ON/OFF
EBOC - ON/OFF

VALU - DMX address setting

With this function, you can adjust the desired DMX-address via the Control Board.

1. Select "VALU" by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, adjust the DMX address by pressing **[UP]** or **[DOWN]** button.
3. Press **[ENTER]** to confirm or pressing **[MODE/ESC]** to return to main menu.

SLAV - Slave setting

With this function, you can define the device as slave.

1. Select "SLAV" by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows "ON" or "OFF".
3. Press **[UP]** to select "ON" if you wish to enable this function or press **[DOWN]** to select "OFF" if you don't.
4. Press **[ENTER]** to confirm or press **[MODE/ESC]** to return to main menu.

EBOC - DMX address setting via controller

With this function, you can adjust the desired DMX-address via an external controller.

This function can only be activated when the DMX-value of all other channels is set to "0" on the controller.

Select "EBOC" by pressing **[UP]** or **[DOWN]**.

Press **[ENTER]**, the display shows "ON" or "OFF".

Press **[UP]** to select "ON" if you wish to enable this function or **[DOWN]** to select "OFF" if you don't.

Press **[MODE/ESC]** to confirm.

Press **[ENTER]** in order to return to the main menu.

On the controller, set the DMX-value of channel 1 to "7".


Set the DMX-value of channel 2 to "7" or "8". When set to "7" you can adjust the starting address between 1 and 255. When set to "8" you can adjust the starting address between 256 and 511.

Set the DMX-value of channel 3 to the desired starting address. If you want to set the starting address to 57, set channel 1 to "7", channel 2 to "7" and channel 3 to "57". If you want to set the starting address to 420, set channel 1 to "7", channel 2 to "8" and channel 3 to "164" (256+164=420).

Wait for approx. 20 seconds and the unit will carry out a reset. After that, the new starting address is set.


RUN - Program Run, Master setting

With the function "RUN", you can run the internal program. You can set the number of steps under Step. You can edit the individual scenes under Edit. You can run the individual scenes either automatically (AUTO), i.e. with the adjusted Step-Time or sound-controlled (SOUN). The selection "ALON" means Stand Alone-mode and "MAST" that the device is defined as master.

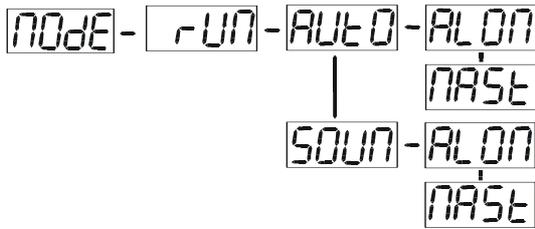

1. Select "AUTO" or "SOUN" by pressing [UP] or [DOWN] button.
2. Press [ENTER] for selecting the desired extension menu.
3. Select "ALON" or "MAST" by pressing [UP] or [DOWN] button.
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

disp - Display the DMX-value, Reverse display, Shut off LED display

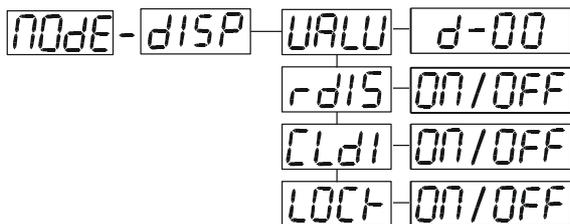

VALU - Display the DMX 512 value of each channel

With this function you can display the DMX 512 value of each channel.

1. Select "VALU" by pressing [UP] or [DOWN] button.
2. Press [ENTER] to confirm; the display shows "D-00". In this setting, the DMX-adjustment of every channel will be displayed.
3. Press [UP] or [DOWN] button in order to select the desired channel. If you select "D-14" the display will only show the DMX-value of the 14th channel.
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.
5. The display shows "D-XX", "X" stands for the DMX-value of the selected channel.

rdis - Reverse display

With this function you can rotate the display by 180° .

1. Select "RDIS" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "ON" or "OFF".
3. Press [UP] to select "ON" if you wish to enable this function or press [DOWN] button to "OFF" if you don't; the display will rotate by 180° .
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

CLDI - Shut off LED display

With this function you can shut off the LED display after 2 minutes.


1. Select "CLDI" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "ON" or "OFF".
3. Press [UP] to select "ON" if you wish to enable this function or press [DOWN] button to "OFF" if you don't.
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

LOCK - Locked keys the display

With this function you can activate the automatic keylock function. If this function is activated, the keys will be locked automatically after exiting the edit mode for 15 seconds. keeping press the [[MODE/ESC] key for 3seconds if you want to deactivate the keylock status.

1. Tap the [UP] or [DOWN] button until "LOCK" is displayed and tap the [ENTER] button.
2. Press the [UP] button to select "ON" to activate this function, or "OFF" to deactivate this function. Press [ENTER] to confirm.
3. Press [Mode/Esc] to return to the main menu.

SEt - Main menu 1

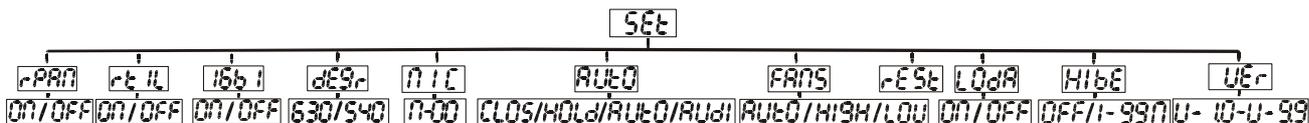

1. Press **[MODE/ESC]** to enter the main menu (display flashing).
2. Press **[UP]** or **[DOWN]** button. to select “**SET**”.

rPAN - Pan Reverse

With this function you can reverse the Pan-movement.

1. Select “**RPAN**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**ON**” or “**OFF**”.
3. Press **[UP]** to select “**ON**” if you wish to enable this function or press **[DOWN]** button to “**OFF**” if you don’t.
4. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

rtIL - Tilt Reverse

With this function you can reverse the Tilt-movement.

1. Select “**RTIL**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**ON**” or “**OFF**”.
3. Press **[UP]** to select “**ON**” if you wish to enable this function or press **[DOWN]** button to “**OFF**” if you don’t.
4. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

16b1 - Switch 16 bit/8 bit

With this function you can switch the device from 16 bit to 8 bit resolution.

1. Select “**16BI**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**ON**” or “**OFF**”.
3. Press **[UP]** to select “**ON**” if you wish to enable this function or press **[DOWN]** button to “**OFF**” if you don’t.
5. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

deGr - Pan degree select

With this function you can select pan angle 630 or 540°.

1. Select “**DEGR**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**630**” or “**540**”.
3. Press **[UP]** to select “**630**” or press **[DOWN]** button to select “**540**”.
4. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

nIC - Mic sensitivity

With this function you can adjust the sensitivity of the microphone.

1. Select “**MIC**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**M-XX**”, “**XX**” stands for the number from 0 to 70.
3. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

AUtO - Automatic Run by no DMX

With this function you can automatic run the device by no DMX.

1. Select “**AUTO**” by pressing **[UP]** or **[DOWN]** button.
2. Press **[ENTER]**, the display shows “**CLOS**”, “**HOLD**”, “**AUTO**” or “**AUDI**”.
3. Press **[UP]** or **[DOWN]** button to select “**CLOS**”, “**HOLD**”, “**AUTO**” or “**AUDI**”, the default is “**HOLD**”.
4. Press **[ENTER]** to confirm or Press **[MODE/ESC]** to return to the main menu.

FANs - Fan’s mode select

With this function you can select the Fan’s mode.

1. Select "FANS" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "HIGH", "AUTO" or "LOW".
3. Press [UP] or [DOWN] button to select "HIGH", "AUTO" or "LOW", the default is "AUTO".
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

RESt - Reset

With this function you can reset the device via the Control Board.

1. Select "RESt" by pressing [UP] or [DOWN] button.
1. Press [ENTER] to reset or Press [MODE/ESC] to return to the main menu.

LOdA - Restore factory settings

With this function you can restore the factory settings of the device. All settings will be set back to the default values (shaded). Any edited scenes will be lost.

1. Select "LOdA" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "ON" or "OFF".
3. Press [UP] to select "ON" if you wish to enable this function or press [DOWN] button to "OFF" if you don't.
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

HIBe — "HIBE" Stand by mode

The lamp and step motors will be power off if the fixture stay without DMX signal for 15 mins (Factory default). And the fixture will be reset before working once it receive DMX signal again.


1. Select "HIBe" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "15M".
3. Press [UP] or [DOWN] button, the display shows "01M", "02M" "99M" or "OFF".
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

VER - Software version

With this function you can display the software version of the device.

1. Select "VER" by pressing [UP] or [DOWN] button.
2. Press [ENTER], The display will show "V-XX", "XX" stands for the version number, such as the display may also show, "V-2.0", "V-9.9" etc.
3. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

AdJU - Main menu 2

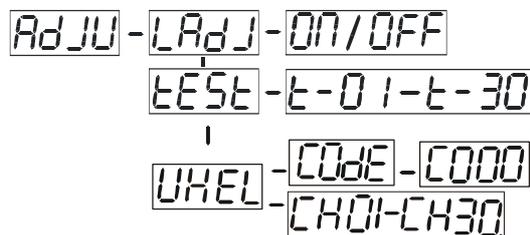

1. Press [MODE/ESC] to enter the main menu (display flashing).
2. Press [UP] or [DOWN] button to select "ADJU".

LAdJ - Lamp adjustment

With this function you can adjust the lamp via the Control Board. The shutter opens and the lamp can be adjusted. In this mode, the device will not react to any control signal.

1. Select "LAdJ" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "ON" or "OFF".
3. Press [UP] to select "ON" if you wish to enable this function or press [DOWN] button to select "OFF" if you don't.

4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

TEST - Test function of each channel


With this function you can test each channel on its (correct) function.

1. Select "TEST" by pressing [UP] button.
2. Press [ENTER], the display shows "T-XX", "X" stands for the channel number.
3. The current channel will be tested.
4. Select the desired channel by pressing [UP] or [DOWN] button.
5. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

WHEL - Fixture code and motor fix

1. Select "WHEL" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "CODE" or "CH01-CH30".
4. Select "CODE" or "CH01-CH30" by pressing [UP] or [DOWN] button.
5. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

TIME - Main menu 3

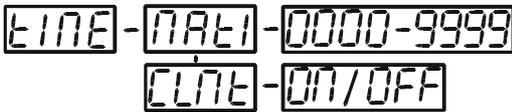

1. Press [MODE/ESC] to enter the main menu (display flashing).
2. Press [UP] or [DOWN] button to select "TIME".

MATE - Fixture running time


With this function you can display the running time of the device.

1. Select "MATE" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "XXXX", "X" stands for the number of hours.
3. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

CLMT - Clear fixture time

With this function you can clear the running time of the device.

1. Select "CLMT" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "ON" or "OFF".
3. Press [UP] to select "ON" if you wish to enable this function or press [DOWN] button to "OFF" if you don't.
4. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

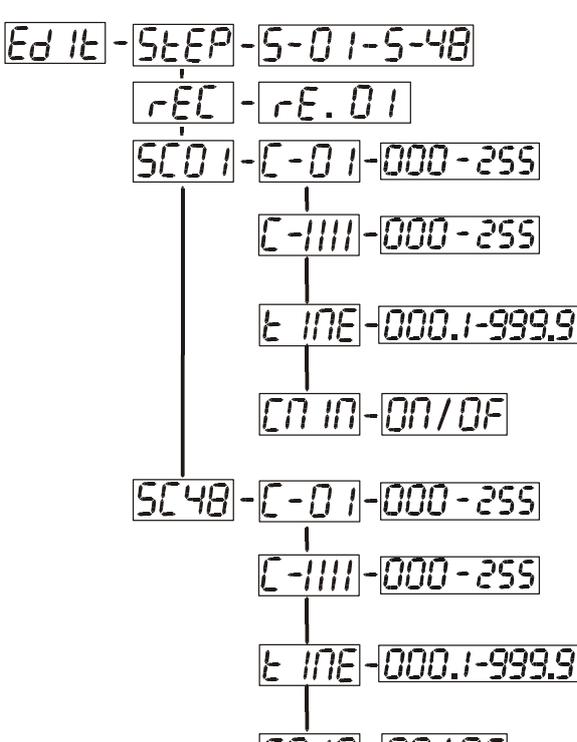

Edit - Main menu 6

1. Press [MODE/ESC] to enter the main menu (display flashing).
2. Press [UP] or [DOWN] button to select "EDIT".

STEP - Define the number of steps in Run

With this function you can define the number of steps in the Program Run.

1. Select "STEP" by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows "S-XX", "X" stands for the total amount of steps you want to save, so you can call up to 48 scenes in "RUN". For example if the "XX" is 05, it means that "RUN" will run the first 5 scenes you saved in "EDIT".
3. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

REC

-Auto Save

With this function you can automatic save the number of steps in the Program Run.

1. Select **"REC"** by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows **"RE.XX"**, **"XX"** stands for the scene number in the internal memory of where your scenes from the controller will be stored.
3. Press [ENTER] to confirm or Press [MODE/ESC] to return to the main menu.

SC01

- Editing the channels of the individual scenes

With this function you can edit the program to be called up in Run.

a) Editing via the Control Board

1. Select **"SC01"** by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows **"SCXX"**, **"X"** stands for the scene no. to be edited.
3. Change the scene no. by pressing [UP] or [DOWN] button.
4. Press [ENTER], the display shows **"C-XX"**, **"XX"** stands for the channel no. Such as **"C-01"**, it means you are editing channel 1 of the selected scene.
5. Select the channel no. you would like to edit by pressing [UP] or [DOWN] button.
6. Press [ENTER] to enter editing for the selected channel, the fixture reacts to your settings. The display shows the DMX value of the edited channel. the DMX value is XXX, XXX is a algorism number value.
7. Adjust the desired DMX value by pressing [UP] or [DOWN] button.
8. Press [ENTER] in order to edit other channels of this scene.
9. Repeat steps 5-8 until you finish setting all the DMX values for all channels of this scene.
10. Once all the channels completed, the display will flash **"TIME"**
11. Press [ENTER] to edit the time needed, the display shows **"XXX.X"**, **"X"** stands for the time needed to run the current scene, Adjust the desired time by pressing [UP] or [DOWN] button.
12. Press [ENTER] to save the settings for the scene you are editing, the display will change to the next scene automatically.
13. Repeat step 3-12 to edit and other scenes, you can edit and save a maximum of 48 scenes.
14. Press [MODE/ESC] to exit. The number of steps can be defined under **"STEP"** and the scenes can be called up under **"RUN"**.

b) Editing via the external controller

Call up the first scene in your controller now.

1. Select **"SC01"** by pressing [UP] or [DOWN] button.
2. Press [ENTER], the display shows **"SC01"**.
3. Press [ENTER], the display shows **"C-01"**.
4. Select **"CNIN"** by pressing [UP] or [DOWN] button.
5. Press [ENTER], the display shows **"OFF"**.
6. Press [UP] or [DOWN] button .the display shows **"ON"**.
7. Press [ENTER], the display shows **"SC02"**. You successfully downloaded the first scene.
8. Adjust the Step-time as described above under point 12.
9. Call up the second scene in your controller now.
10. Repeat steps 5-11 until all desired scenes are downloaded.
11. Press [MODE/ESC] to exit. The number of steps can be defined under **"STEP"** and the scenes can be called up under **"RUN"**.

9. INSTRUCTIONS ON USE:

DMX channel's functions and their values (14 DMX channels):				
Mode/Channel			Value	Function
St	Ba	Ex		
1	1			Color Wheel
			0-14	Open / white
			15-29	Color1
			30-44	Color2
			45-59	Color3
			60-74	Color4
			75-89	Color5
			90-104	Color6
			105-119	Color7
			120-127	Color8
			128-189	Forwards rainbow effect from fast to slow
			190-193	No rotation
194-255	Backwards rainbow effect from slow to fast			
2	2			Rotating gobos, cont. rotation
			0-9	Open
			10-19	Rot. gobo 1
			20-29	Rot. gobo 2
			30-39	Rot. gobo 3
			40-49	Rot. gobo 4
			50-59	Rot. gobo 5
			60-69	Rot. gobo 6
			70-79	Rot. gobo 7
			80-95	Rot. gobo 1 shake
			96-111	Rot. gobo 2 shake
			112-127	Rot. gobo 3 shake
			128-143	Rot. gobo 4 shake
			144-159	Rot. gobo 5 shake
160-175	Rot. gobo 6 shake			
176-191	Rot. gobo 7 shake			
192-255	Rot. gobo wheel cont. rotation slow to fast			
3	3			Rotating gobo index, rotating gobo rotation
			0-127	Gobo indexing
			128-189	Forwards gobo rotation from fast to slow

			190-193	No rotation
			194-255	Backwards gobo rotation from slow to fast
4	4			Speed pan/tilt movement
			0-225	max to min speed
			226-235	blackout by movement
			236-245	blackout by all wheel changing
			246-255	no function
5	5			PAN Movement 8bit
			0-255	Pan Movement By 540/630
6	6			TILT Movement 8bit
			0-255	Tilt Movement By 270
7	7		Rotating prism, Prism / Gobo macros:	
			0-31	open
			32-63	3 facet prism
			64-95	trapezoid prism
			96-127	Forst
			128-135	Macro 1
			136-143	Macro 2
			144-151	Macro 3
			152-159	Macro 4
			160-167	Macro 5
			168-175	Macro 6
			176-183	Macro 7
			184-191	Macro 8
			192-199	Macro 9
			200-207	Macro 10
			208-215	Macro 11
			216-223	Macro 12
224-231	Macro 13			
232-239	Macro 14			
240-247	Macro 15			
248-255	Macro 16			
8	8		Rotating prism index, rotating prism rotation :	
			0-127	Prism indexing
			128-189	Forwards prism rotation from fast to slow
			190-193	No rotation
			194-255	Backwards prism rotation from slow to fast
9	9			Focus :
			0-255	Continuous adjustment from far to near
10	10			Shutter, strobe
			0-31	Shutter closed
			32-63	No function (shutter open)

		64-95	Strobe effect slow to fast
		96-127	No function (shutter open)
		128-159	Pulse-effect in sequences
		160-191	No function (shutter open)
		192-223	Random strobe effect slow to fast
		224-255	No function (shutter open)
11	11		Dimmer (intensity)
		0-255	Intensity 0 to 100%
12	12		Reset, internal programs
		0-19	Color&Gobo change normal
		20-29	Color change to any position
		30-39	Color&Gobo change to any position
		40-59	No function
		60-79	No function
		80-84	All motor reset
		85-87	Scan motor reset
		88-90	Colors motor reset
		91-93	Gobo motor reset
		94-96	No function
		97-99	Other motor reset
		100-119	Internal program 1
		120-139	Internal program 2
		140-159	Internal program 3
		160-179	Internal program 4
		180-199	Internal program 5
		200-219	Internal program 6
		220-239	Internal program 7
		240-255	Auto program by music
13			Pan Fine 16bit
		0-255	Fine control of Pan movement
14			Tilt Fine 16bit
		0-255	Fine control of Tilt movement

10. ERROR MESSAGE

When you turn on the fixture, it will make a reset at first. The display may show “Err channel is XX” while there are problems with one or more channels. “XX” stands for channel 1, 2, 3, 5, 6 who has the testing sensor for positioning. For example, when the display shows “02 Er”, it means there is some error in channel 2. If there are some errors on channel 1, channel 5, channel 6 at the same time, you may see the error message “01 Er”, “05 Er”, “06 Er” flash repeated for 2 times, and then the fixture will generate a second reset. If the fixture remain error message after performing reset more than 2 times, only the channels which have errors can not work properly, others can work as usual. Please contact with dealer or manufacturer for service, self repair is not allowed.

01Er:

(Color Wheel error) This message will appear after the reset of the fixture if the head’s magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on

the main PCB). The head is not located in the default position after the reset.

02Er:

(Rotating gobos error) This message will appear after the reset of the fixture and if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driver circuit on the main PCB). The rotating gobo is not located in the default position after the reset.

03Er:

(Gobo rotating error) This message will appear after the reset of the fixture and if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driver circuit on the main PCB). The zoom is not located in the default position after the reset.

05Er:

(PAN Movement error) This message will appear after the reset of the fixture if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its drive circuit on the main PCB). The color wheel is not located in the default position after the reset.

06Er:

(TILT Movement error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The yoke is not located in the default position after the reset.

07Er:

(Prism error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The yoke is not located in the default position after the reset.

09Er:

(Focus error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (sensor failed or magnet missing) or the stepping-motor is defective (or its driving IC on the main PCB). The yoke is not located in the default position after the reset.

11. CLEANING AND MAINTENANCE

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) To make sure the smooth gobo rotation, we suggest adding proper lube to the wheel each three month, avoiding the excessive lube splashes during the gobo rotating.
- 4) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device. Please refer to the instructions under “Installation instructions”.
Should you need any spare parts, please order genuine parts from your local dealer.

12. TECHNICAL SPECIFICATIONS

Power supply: AC 100-240V~, 50/60Hz

Power consumption: 220W

Packing dimensions: 46 x 32.5 x 37cm

Net weight: 10.5KGS

Gross weight: 12.5 KGS

Remark: errors and omissions for every information given in this manual excepted. All information is subject to change without prior notice.